

## 78035 MOBIL TOOL TRAY

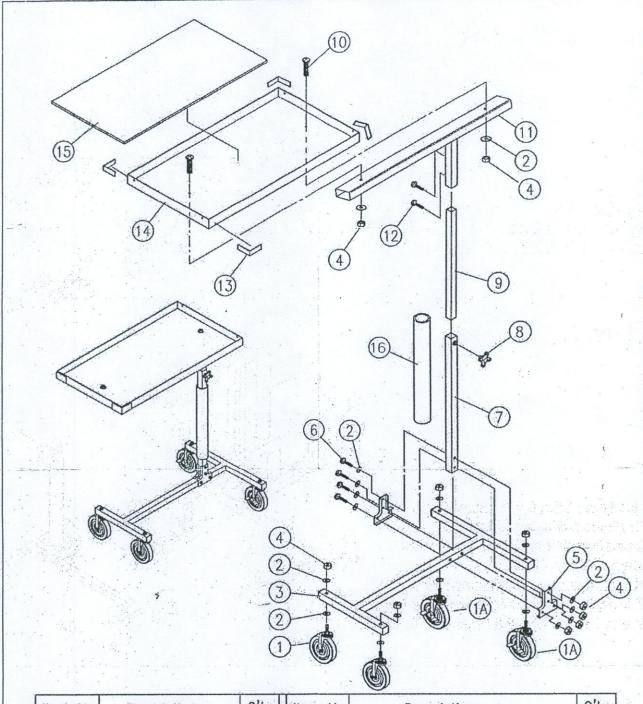

Item No	Description	Q'ty	Item No.	Description	Q'ty
1	3" Castor	2	9	Upper Tube	1
1.A	3" Locking Castor	2	10	3/8"x1-1/2" Flat Head	2
2	3/8" Flat Washer	18	11	Top Tubes	1
3	Base Tube	1	12	3/8"x5/8" Bolt	2
4.	3/8" Lock Nut	10	13	Foam Corner Cushions	4
5	Plate	2	14	Tray	1
6	3/8"x2" Bolt	4	15	Tray Liner	1
.7	Lower Tube	1	16	Foam Cushion	1
8	Knob	1			

Step 1.

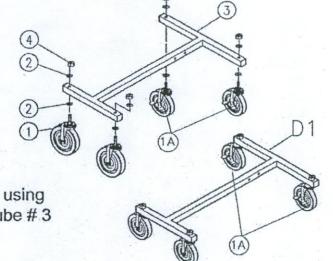

Install castors # 1 and locking castors # 1A using flat washers # 2 and lock nuts # 4 to base tube # 3 as shown in drawing D 1.

Step 2.

Install lower tube # 7 to base tube # 3 with plates # 5 using 3/8 x 2" # 6 bolts, flat washers # 2 and lock nuts # 4 as shown in drawing D 2. slide foam cushion # 16 over lower tube # 7 Install upper tube # 9 into lower tube # 7 and Install knob # 8 as shown in Drawing D 2.

Step 3.

